


### 2Part Large Vandal Cover and Large Vandal Cover

# **Gas Support Placement and Poundage Table:**

Note: The Gas Support placement is for cabinets ranging in the height of 24" only. Refer to the "Green" section of the table for the correct poundage required. Placement of the gas support should not be varied. If the placement of the gas support is altered it may effect the operation of the gas support and may not work properly.

Recommended use with the 2Part Large Vandal System (#1959/#1941) and the Large Vandal System (#2097/#1941).

It is important to install hinge as noted in the "Hinge Installation Instructions" failure to do so may result in damage to the hinge caused by the amount of pressure that is applied to the hinge from the gas support.

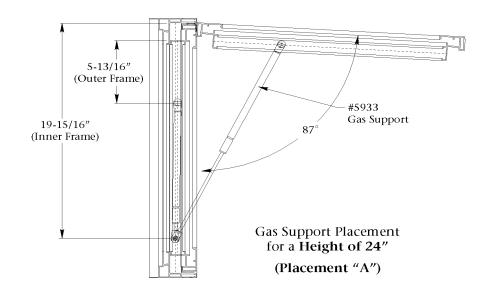

#### Poundage per Gas Support in lbs. (2 Gas Supports per door)

	Width									
Height	<i>36</i>	<b>48</b>	<i>60</i>	<i>72</i>	<b>84</b>	<i>96</i>	<i>108</i>	<b>120</b>	<i>132</i>	144
<i>24</i>	30	30	40	40	50	50	50	60	60	70
<i>30</i>	30	30	30	40	40	40	50	50	50	60
<i>36</i>	30	30	40	50	50	60	60	70	70	70
<i>42</i>	40	50	50	60	60	70	80	80	90	90
<b>48</b>	50	60	60	70	80	90	90	100	110	110
<i>54</i>	60	70	80	80	90	100	110	120	130	140
<i>60</i>	70	80	90	100	110	120	130	140	160	170
66	80	90	100	120	130	140	150	170	180	110
<i>72</i>	90	100	120	130	150	160	180	110	110	120
<i>78</i>	60	70	80	80	90	100	110	120	130	140
84	60	70	80	90	100	120	130	140	150	160

Placement "A" #5900 Gas Support (Special Order Only)
Placement "B" #5934 Gas Support (Stock Item)
Placement "B" #5900 Gas Support (Special Order Only)
Placement "C" #5934 Gas Support (Stock Item)
Placement "C" #5900 Gas Support (Special Order Only)




### 2Part Large Vandal Cover and Large Vandal Cover

## **Gas Support Placement and Poundage Table:**

Note: The Gas Support placement is for cabinets ranging in the height of 30" to 72" only. Refer to the "Yellow & Orange" sections of the table for the correct poundage required. Placement of the gas support should not be varied. If the placement of the gas support is altered it may effect the operation of the gas support and may not work properly.

Recommended use with the 2Part Large Vandal System (#1959/#1941) and the Large Vandal System (#2097/#1941).

It is important to install hinge as noted in the "Hinge Installation Instructions" failure to do so may result in damage to the hinge caused by the amount of pressure that is applied to the hinge from the gas support.

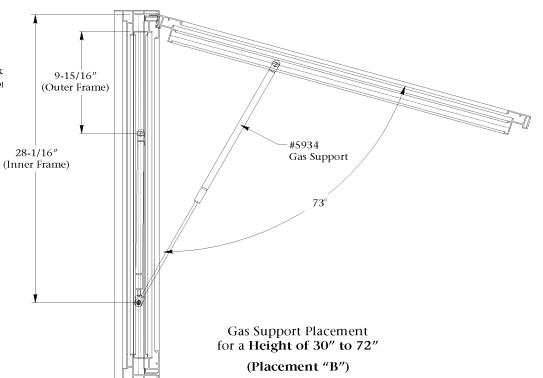

#### Poundage per Gas Support in lbs. (2 Gas Supports per door)

	Width									
Height	<i>36</i>	<b>48</b>	<i>60</i>	<i>72</i>	84	<del>96</del>	108	<b>120</b>	<b>132</b>	144
24	30	30	40	40	50	50	50	60	60	70
<i>30</i>	30	30	30	40	40	40	50	50	50	60
<i>36</i>	30	30	40	50	50	60	60	70	70	70
<i>42</i>	40	50	50	60	60	70	80	80	90	90
<b>48</b>	50	60	60	70	80	90	90	100	110	110
<i>54</i>	60	70	80	80	90	100	110	120	130	140
<i>60</i>	70	80	90	100	110	120	130	140	160	170
66	80	90	100	120	130	140	150	170	180	110
<i>72</i>	90	100	120	130	150	160	180	110	110	120
<i>78</i>	60	70	80	80	90	100	110	120	130	140
<b>84</b>	60	70	80	90	100	120	130	140	150	160

Placement "A" #5900 Gas Support (Special Order Only)
Placement "B" #5934 Gas Support (Stock Item)
Placement "B" #5900 Gas Support (Special Order Only)
Placement "C" #5934 Gas Support (Stock Item)
Placement "C" #5900 Gas Support (Special Order Only)




# 2Part Large Vandal Cover and Large Vandal Cover

## **Gas Support Placement and Poundage Table:**

Note: The Gas Support placement is for cabinets ranging in the height of 66" to 84" only. Refer to the "Magenta & Blue" sections of the table for the correct poundage required. Placement of the gas support should not be varied. If the placement of the gas support is altered it may effect the operation of the gas support and may not work properly.

Recommended use with the 2Part Large Vandal System (#1959/#1941) and the Large Vandal System (#2097/#1941).

It is important to install hinge as noted in the "Hinge Installation Instructions" failure to do so may result in damage to the hinge caused by the amount of pressure that is applied to the hinge from the gas support.

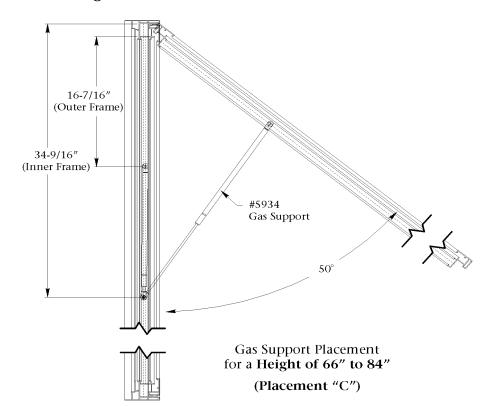

#### Poundage per Gas Support in lbs. (2 Gas Supports per door)

	Width									
Height	<i>36</i>	<b>48</b>	<b>60</b>	<i>72</i>	<b>84</b>	<i>96</i>	<i>108</i>	<i>120</i>	<i>132</i>	144
24	30	30	40	40	50	50	50	60	60	70
<i>30</i>	30	30	30	40	40	40	50	50	50	60
<i>36</i>	30	30	40	50	50	60	60	70	70	70
<i>42</i>	40	50	50	60	60	70	80	80	90	90
<b>48</b>	50	60	60	70	80	90	90	100	110	110
<i>54</i>	60	70	80	80	90	100	110	120	130	140
<i>60</i>	70	80	90	100	110	120	130	140	160	170
66	80	90	100	120	130	140	150	170	180	110
<i>72</i>	90	100	120	130	150	160	180	110	110	120
<i>7</i> 8	60	70	80	80	90	100	110	120	130	140
84	60	70	80	90	100	120	130	140	150	160

Placement "A" #5933 Gas Support (Special Order Only)
Placement "B" #5934 Gas Support (Stock Item)
Placement "B" #5934 Gas Support (Special Order Only)
Placement "C" #5934 Gas Support (Stock Item)
Placement "C" #5934 Gas Support (Special Order Only)